


Voice Evacuation Accessories

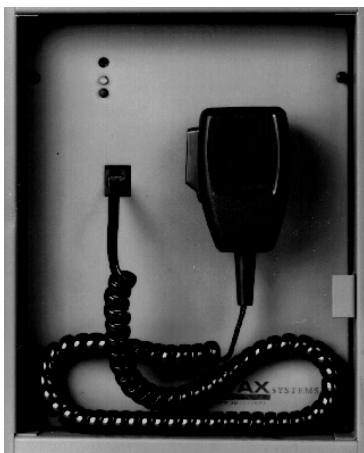

EVX-RM-H Shown with door removed.



EVX-ZM-H Zone Module

REMOTE MICROPHONE APPLICATION


In the normal (Standby) mode, announcements can be made from any remote microphone at any time. Simply keying any remote microphone will allow a manual paging message to be broadcast in an "ALL-CALL" mode.

If multiple remote microphones are used, and two or more are simultaneously keyed, then the first microphone keyed will have paging priority. The paging microphone in the master will always have priority over any and all remote microphones. The EVX-RM-H can be wired for general public address, and will be automatically disabled on alarm.

In the alarm mode, the keying of any remote microphone will interrupt any pre-recorded tone or message, and will allow manual voice evacuation messages to take priority. When the microphone Press-to-Talk key is released, the automatic pre-recorded voice evacuation message (typically tone and voice) will be replayed from the start.

EVX-RM-H SPECIFICATIONS

Power	24vdc supplied by the voice evacuation panel
Back box Dimensions	8" x 10" x 3" (WxHxD)
Colors	Red or Charcoal Grey

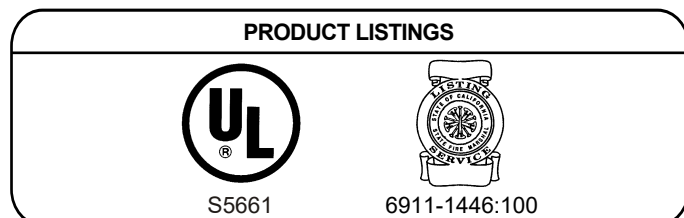

Specifications subject to change without notice.

ZONE MODULE APPLICATION

The EVX-ZM-H Zone Module allows the output of any EVX-25 / 50 / 100 systems audio amplifier to supervise and drive multiple speaker zones.

Individual zone select switches are provided which allow the manual selection of any or all voice evacuation zones for emergency paging. Automatic zone selection may be provided by the zone splitters by the connection of normally-open contacts from the Fire Alarm Control Panel (FACP) or other auxiliary control system.

An "ALL-CALL" Switch is provided which will select all voice evacuation zones for emergency paging.

Individual LEDs are provided to annunciate zone status of either "Zone Active" or "Zone Fault".

The EVX-ZM-H Zone Module is compatible with 25V and 70V voice evacuation system amplifier outputs.

STANDARD FEATURES (Zone Module)

- 4 Class B or 2 Class A Supervised Audio Outputs
- Individual Zone Switches
- All Call Switch
- Automatic General Alarm Zones
Selectable when Alarm is Silenced
Optional Alarm by Zone
- Individual LEDs indicate Zone Selection.
- Individual LEDs indicate Zone Trouble.
- Up to 8 Zones Mounted in EVAX 25/50
- Up to 16 Zones Mounted in EVAX 100
- UL Listed.

