



FN-600X-220 ***Power Supply/Charger***

Installation Guide

Overview:

The FN-600X-220 is a power supply that converts a 220VAC 50/60Hz input to a 12VDC or 24VDC regulating output (see specifications below).

Specifications:

Input:

- Input 220VAC 50/60Hz, 1.2 amp.

Output:

- 12VDC or 24VDC selectable output.
- 6 amp continuous supply current at 12VDC or 24VDC.
- Filtered and electronically regulated outputs.
- Short circuit and thermal overload protection.

Battery Backup:

- Built-in charger for sealed lead acid or gel type batteries.
- Automatic switch over to stand-by battery when AC fails.
- Maximum charge current 0.7 amp.
- Zero voltage drop when switched over to battery backup.

Supervision:

- AC fail supervision (form “C” contacts).
- Low battery supervision (form “C” contacts).
- Battery presence supervision (form “C” contacts).

Additional Features:

- AC input, DC output and BAT trouble LED indicators.
- Power supply, enclosure, cam lock and battery leads.

Enclosures:

FN-600X-R220 (Red Enclosure)

FN-600X-C220 (Charcoal Grey Enclosure)

Enclosure Dimensions (H x W x D):

13.5” x 13” x 3.25” (342.9mm x 330.2mm x 82.55mm)

Installation Instructions:

The unit should be installed in accordance with article 760 of The National Electrical Code as well as NFPA 72 and all applicable Local Codes.

1. Mount unit in the desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure’s upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install two fasteners. Place the enclosure’s upper keyholes over the two upper screws. Install the two lower screws and make sure to tighten all screws (*Enclosure Dimensions, pg. 4*).
2. The power supply is pre-wired to the ground (chassis). Connect main incoming ground to the provided green grounding conductor lead. Connect unswitched AC power (220VAC, 50/60 Hz to terminals marked [L, G, N] (*Fig. 1, pg. 4*). Use 14 AWG or larger for all power connections (Battery, DC output, AC input). Use 22 AWG to 18 AWG for power-limited circuits (AC Fail/Low Battery reporting).

Keep power-limited wiring separate from non power-limited wiring (220VAC, 50/60Hz Input, DC Output, Battery Wires). Minimum 0.25” spacing must be provided.

CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside. Refer installation and servicing to qualified service personnel.

3. Set the unit to the desired DC output voltage by setting SW1 (*Fig. 1, pg. 4*) to the appropriate position (*Power Supply Voltage Output Selections Chart, pg. 2*).
4. Measure output voltage before connecting any devices to ensure proper operation. Improper or high voltage will damage these devices. When servicing the unit, AC mains should be removed.
5. Connect devices to be powered to terminals marked [+ DC -], carefully observing correct polarity (*Fig. 1, pg. 4*).
6. For Access Control applications batteries are optional. When batteries are not used, a loss of AC will result in the loss of output voltage. When the use of stand-by batteries is desired, they must be lead acid or gel type.
7. Connect appropriate signaling notification devices to terminals marked [AC FAIL & BAT FAIL] (*Fig. 1, pg. 4*), supervisory relay outputs.
Note: When used in fire alarm, burglar alarm or access control applications, “AC Fail” relay should be utilized to visually indicate that AC power is on. To delay report for 6 hours, cut “AC Delay” jumper (*Fig. 1, pg. 4*).
8. Please ensure that the cover is secured with the provided Key Lock.

Power Supply Output Specifications:

Output	Switch Position
12VDC	SW1 - CLOSED (<i>Fig. 1a, pg. 4</i>)
24VDC	SW1 - OPEN (<i>Fig. 1a, pg. 4</i>)

Stand-by Specifications (total current shown):

Output	4 hr. of Stand-by & 5 Minutes of Alarm	24 hr. of Stand-by & 5 Minutes of Alarm	60 hr. of Stand-by & 5 Minutes of Alarm
12VDC / 40AH Battery	Stand-by = 6.0 amp Alarm = 6.0 amp	Stand-by = 1.0 amp Alarm = 6.0 amp	Stand-by = 300mA Alarm = 6.0 amp
24VDC / 12AH Battery	—	Stand-by = 200mA Alarm = 6.0 amp	—
24VDC / 40AH Battery	Stand-by = 6.0 amp Alarm = 6.0 amp	Stand-by = 1.0 amp Alarm = 6.0 amp	Stand-by = 300mA Alarm = 6.0 amp

LED Diagnostics:

Red (DC)	Green (AC)	Red (BAT)	Status
ON	ON	ON	Normal operating condition.
ON	OFF	ON	Loss of AC. Stand-by battery supplying power.
OFF	ON	OFF	No DC output. Battery Trouble
OFF	OFF	OFF	Loss of AC. Discharged or no stand-by battery. No DC output.
ON	ON	OFF	Battery missing / Low battery.

Terminal Identification:

Terminal Legend	Function/Description
L, G, N	Connect 220VAC 50/60Hz to these terminals: L to hot, N to neutral. Do not use the [G] terminal.
+ DC -	12VDC / 24VDC @ 6 amp continuous non power-limited output.
AC Fail NC, C, NO	Indicates loss of AC power, e.g. connect to audible device or alarm panel. Relay normally energized when AC power is present. Contact rating 1 amp @ 28VDC. AC or brownout fail is reported within 1 minute of event. To delay reporting of up to 6 hrs., cut “AC delay” jumper and reset power to unit.
Bat Fail NC, C, NO	Indicates low battery condition, e.g. connect to alarm panel. Relay normally energized when DC power is present. Contact rating 1 amp @ 28VDC. A removed battery is reported within 5 minutes. Battery reconnection is reported within 1 minute. Low battery threshold: 12VDC output threshold set @ approximately 10.5VDC, 24VDC output threshold set @ approximately 21VDC.
+ BAT -	Stand-by battery connections. Maximum charge current 0.7 amp.

Wiring:

Use 14 AWG or larger for all power connections.

Note: Take care to keep power-limited circuits separate from non power-limited wiring (220VAC, Battery).

Maintenance:

Unit should be tested at least once a year for the proper operation as follows:

Output Voltage Test: Under normal load conditions, the DC output voltage should be checked for proper voltage level (refer to *Power Supply Voltage Output Specifications* chart).


Battery Test: Under normal load conditions check that the battery is fully charged, check specified voltage both at battery terminal and at the board terminals marked [+ BAT -] to ensure that there is no break in the battery connection wires.

Note: Maximum charging current under discharge is 0.7 amp.

Note: Expected battery life is 5 years, however, it is recommended changing batteries in 4 years or less if needed.

Fig. 1

CAUTION: De-energize unit prior to servicing. For continued protection against risk of electric shock and fire hazard replace fuse with the same type and rating 5A, 250V. Do not expose to rain or moisture.

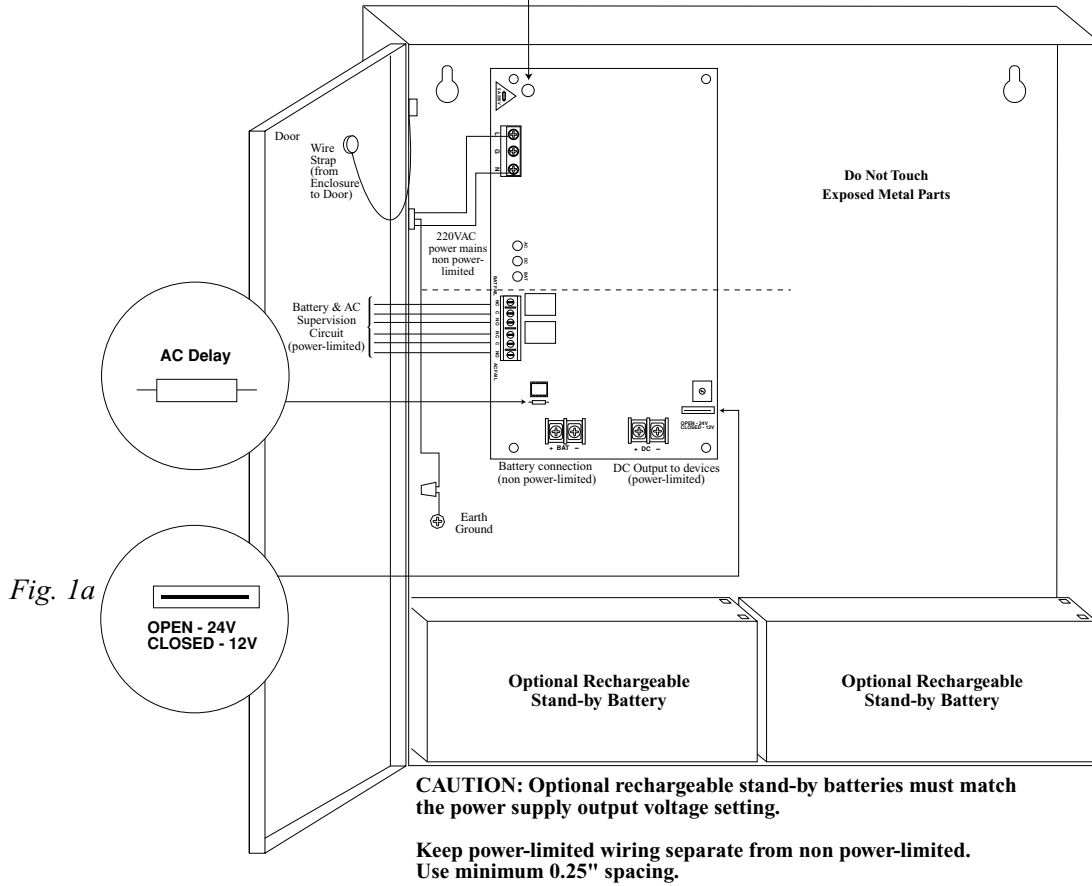

Enclosure Dimensions:

13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.55mm)

